



Frankford Arsenal X-10 Bullet Feeder Block



Tony Wang

[VIEW IN BROWSER](#)

updated 9. 12. 2023 | published 9. 12. 2023

Summary

Disables the bullet feeder on a Frankford Arsenal X-10 press equipped with a their bullet feeder.

[Hobby & Makers](#) > [Tools](#)

Tags: [x10](#) [bulletfeeder](#) [frankfordarsenal](#)

On Frankford Arsenal X-10 presses equipped with their bullet feeder, this tool disables the bullet feeder by preventing bullets from being feed to the case and bullet seater die in station 9.

To use the feeder block, hold the ridged section between your thumb and index finger with the loop pointing towards the rear of the press. Place the feeder block behind the black protrusion of the bullet carriage. Pull the carriage towards station 9. once the carriage is all the way forward, slide the feeder block under the tool head.

Print Settings

Set resolution to 0.2, wall count to 6, and your top and bottom layer count to 6.

Arrange the piece with the loop facing up. Refer to the image showing the print orientation.

Post-Printing

No post processing needed. Simply remove from the printer, and you're ready to use!

Model files



bullet-feeder-block.stl

License ©

This work is licensed under a
[Creative Commons \(4.0 International License\)](#)



Attribution-NonCommercial

-
- ✗ | Sharing without ATTRIBUTION
 - ✓ | Remix Culture allowed
 - ✗ | Commercial Use
 - ✗ | Free Cultural Works
 - ✗ | Meets Open Definition