

## Bosch GBA 18V Battery Connector/ Adapter (e.g. TS100)

A Agar

[VIEW IN BROWSER](#)

updated 13. 7. 2022 | published 11. 7. 2021

### Summary

About Bosch battery connector or adapter. With this adapter you can use your Bosch professional (blue series) 18V...

[Hobby & Makers](#) > [Tools](#)

Tags: [bosch](#) [ts100](#) [connector](#) [gba](#) [ts80](#) [ts80solderingiron](#)  
[boschprofessional](#) [gba18v](#) [ts100battery](#)

### About

Bosch battery connector or adapter. With this adapter you can use your Bosch professional (blue series) 18V batteries (Typ: GBA18V) to power other devices, e.g. the popular TS-100 soldering iron).

## Instructions

You need to print the 3 pieces and in addition you need 2x spade terminal connectors (size 1/4" / 6.3mm) plus cable.

1. Insert your cable (1.5mm<sup>2</sup> should fit) through the holes of the "back" part. Check for polarity (plus/minus is marked on the battery pack).
  1. Now crimp the spade terminals to your cable.
  2. Afterwards insert the spade terminals into the front part, ensure they are pushed all to the "front" (providing a proper connectivity to the battery later).
  3. Attach the "back" part to the "front" part, bend snappers carefully.
  4. Slide on the part to the battery to check for proper connection.
  5. When everything fits install the "lid" to the other parts from above (snaps on). You can use some (super) glue if you want to make it permanent. Congratulations, you are done and should be ready to use the adapter.

None of the parts needs support. Print "lid" upside-down and "back" showing inside (bigger holes) upwards.

## WARNING

**BE CAREFUL! ONLY CONNECT TO THE BATTERY I F YOU UNDERSTAND THE HAZARDS!** There is no active protection, neither for overusage nor to prevent deep discharging. While a deep discharge (e.g. less than 3 volts per cell) can easily ruin your Li-ion battery the consumption of a too high current or trying to charge the battery with this adapter can be much more dangerous and in worst case lead to a explosion of the battery. Thereof never ever use this connector to charge the battery! And ensure your device powers off before you reach the low voltage point (of no return). Please only play with such things if you understand and know what you are doing. Thanks.

## Print Settings

### Printer Brand:

Crealitiy

### Printer:

Ender 3

### Rafts:

No

**Supports:**

No

**Resolution:**

,24

**Infill:**

20

**Filament:**

Basicfil PETG black

**Notes:**

 
None of the parts needs support. Print "lid" upside-down and "back" showing inside up.

Category: Tools

 
## Model files

**gba18v-adapter-lid\_v30.stl**

☐ Lid / Deckel

**gba18v-adapter-front\_v30.stl**

☐ Front / Vorderteil

**gba18v-adapter-back\_v30.stl**

☐ Back / Rückteil

[Find source .stl files on Thingiverse.com](#)

# License

This work is licensed under a  
**Creative Commons (4.0 International License)**



**Attribution—Noncommercial—Share Alike**

---

- ✗ | Sharing without ATTRIBUTION
- ✓ | Remix Culture allowed
- ✗ | Commercial Use
- ✗ | Free Cultural Works
- ✗ | Meets Open Definition