



Stress Free First Layer calibration in less than 5 Minutes to perfection



yahbluez

[VIEW IN BROWSER](#)

updated 18. 6. 2026 | published 18. 6. 2026

Summary

First layer the base of everything. No proper Z layer no proper print ever. Solving the terrifying mystery of Z layer.



N/A



6 pcs



0.20 mm



0.40 mm
0.60 mm



PLA
PET



N/A



Prusa
MK3/S/S+

[3D Printers](#) > [Test Models](#)

Tags: [vase](#) [calibration](#) [first](#) [vasemode](#) [stick](#) [z](#) [blob](#)
[stringing](#) [firstlayer](#) [sex](#) [bambu](#) [bambulab](#) [x1c](#) [zlayer](#)
[escalation](#) [desaster](#) [bambustudio](#) [p1p](#)

TL;DR

First layer calibration howto which works for anyone.

To get a free Spool of Prusament use one of this Promo Links for your Printer Order.

Prusa Core One+ KitPrusa Core OnePrusa Core One LPrusa XL

Collection

tools, 3D printing


updates

update 2026.0618

- added Elegoo Centauri Carbon2 Canvas
(one of the most underrated printers today like a P2S+AMS2 but half the price and Klipper based)

update 2026.0523

- added Prusament PETG Ultraglow

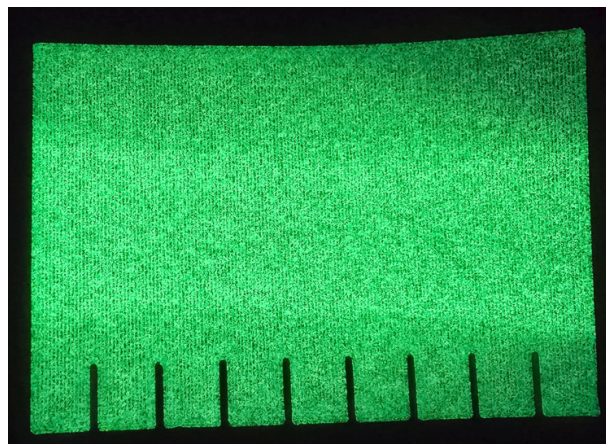

update 2026.0308

- added Elegoo Neptun 3 (again was lost)

update 2025.0712

- added Prusa CORE one PLA
- added Prusa CORE one PETG
- added Prusa CORE one ASA

update 2024.0229

- added STL file

update 2024.0103

- added right hand / left hand version to make notes easier
- added CURA right hand
- added CURA left hand

There it is dear Ultimaker Cura users, just for you.

update 2023.0723

- added **Temp Tower Series**

update 2023.0522

- added elegoo neptune 3

update 2023.0518

- added Snapmaker A250 and A350 gcode

update 2023.0310

- added 3mf for prusa mini

update 2023.0226

- added collection with the full bed test

update 2023.0224

- cleaned folder structure
- added bambustudio PLA
- added bambustudio PETG

update 2023.01

- added gcode Prusa Mini
- added gcode ender 3
- added gcode ender 3 pro

update 2022.11

- minor text changes/edits
- added step file
- added 3mf file to make self slicing easy
- **added final full bed test print**
- **print in place giveaway model - spinning ring**

Let's get started! First layer the base of everything

If you are one of us who runs into the problem to not get calibrated the Z layer and spends already hours of trying - it all ends now. Soon you will have a proper Z Layer calibration with your printer and can enter the world of successful enjoying 3D printing. (*)

Soon

That is less than 9 Minutes, typically less than **5 Minutes**. Read carefully.

Let's go

Print and observe the process carefully, the model is designed in a way to give you a good view on the print. It starts and draws a frame. The gcode prints, after drawing the perimeter, horizontal from the bottom up to the top.

It starts from the bottom when the frame is done.

If you slice by yourself make sure the bottom layer is printed horizontal and not in the default 45° way. The 45° way will hide issues but we will fix them.


Preparation

- make sure your print sheet is cleaned with **IsoPropanolAlkohol** or whatever you need to clean yours. I recommend the 99.9% pure IPA over the 90% because i don't like to have the whatever 10% addons on my print sheet.
- even if it looks clean, cleaning is very important to get a good first layer
- These **5 seconds of cleaning** before every print with less than a teaspoon of IPA will save you a lot of money from ruined prints, wasted time and damaged sheets
- clean while the bed is not heated, just pour a little amount on the print sheet and wipe with a towel.
- don't use a dark filament for this calibration, I say that while deep dark black is my favorite PLA but using a dark during calibration makes it hard to see what you have to see.
- **the galaxy silver** you got with your prusa is best for calibration, but you can use any color with a good contrast to the print bed
- make sure that you have a good lamp you need light to see what's going on
- really a strong flashlight, a dive lamp, whatever, better than light is more light, the lamp of your phone is great for that.
- now we can start

How IPA works

The alcohol solves any grease and transports it by capilar effects into the paper towel, while you wipe the sheet. That happens very fast and you only need a small amount of IPA, just a teaspoon is enough.

Learn what you have to look out for

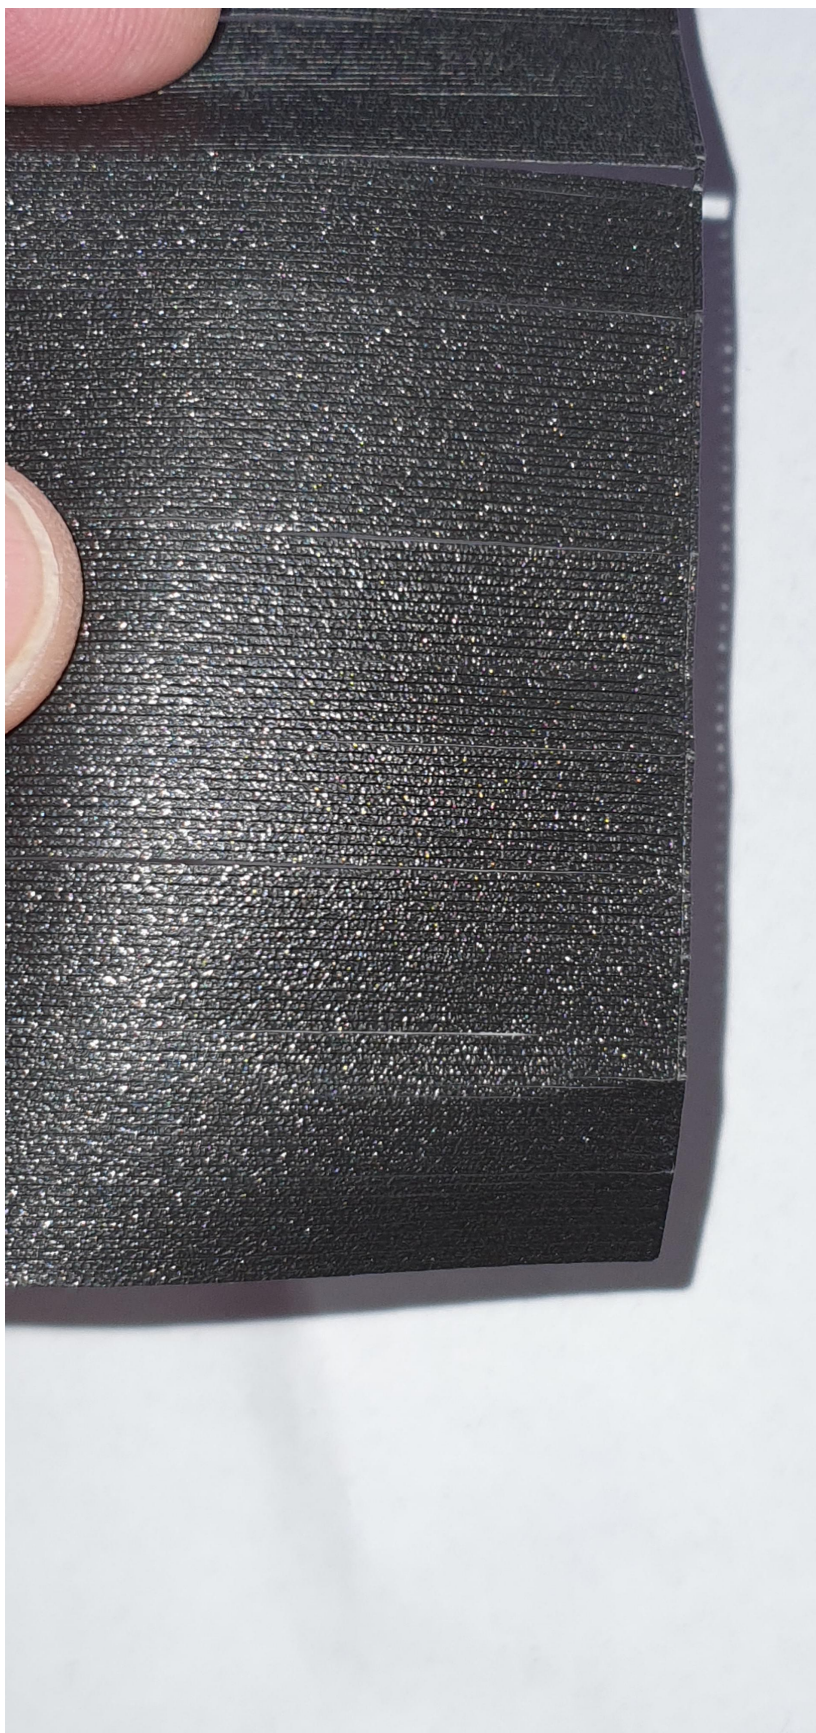


This picture doesn't show a good first layer, **this first layer is a complete disaster**. I show this to you to help you understand why black is a not such a good idea to calibrate the Z layer. It hides too much.

The next pictures, you may know them from your own prints, trying to get that first layer fixed. This is what a not working first layer - nozzle much too high - looks like.

This one is printed with the exact same setting as the black one. With this pale orange you see what the black didn't show you.

- no binding between the filament strings
- you can rip them apart without force
- you can look through
- holes and blobs

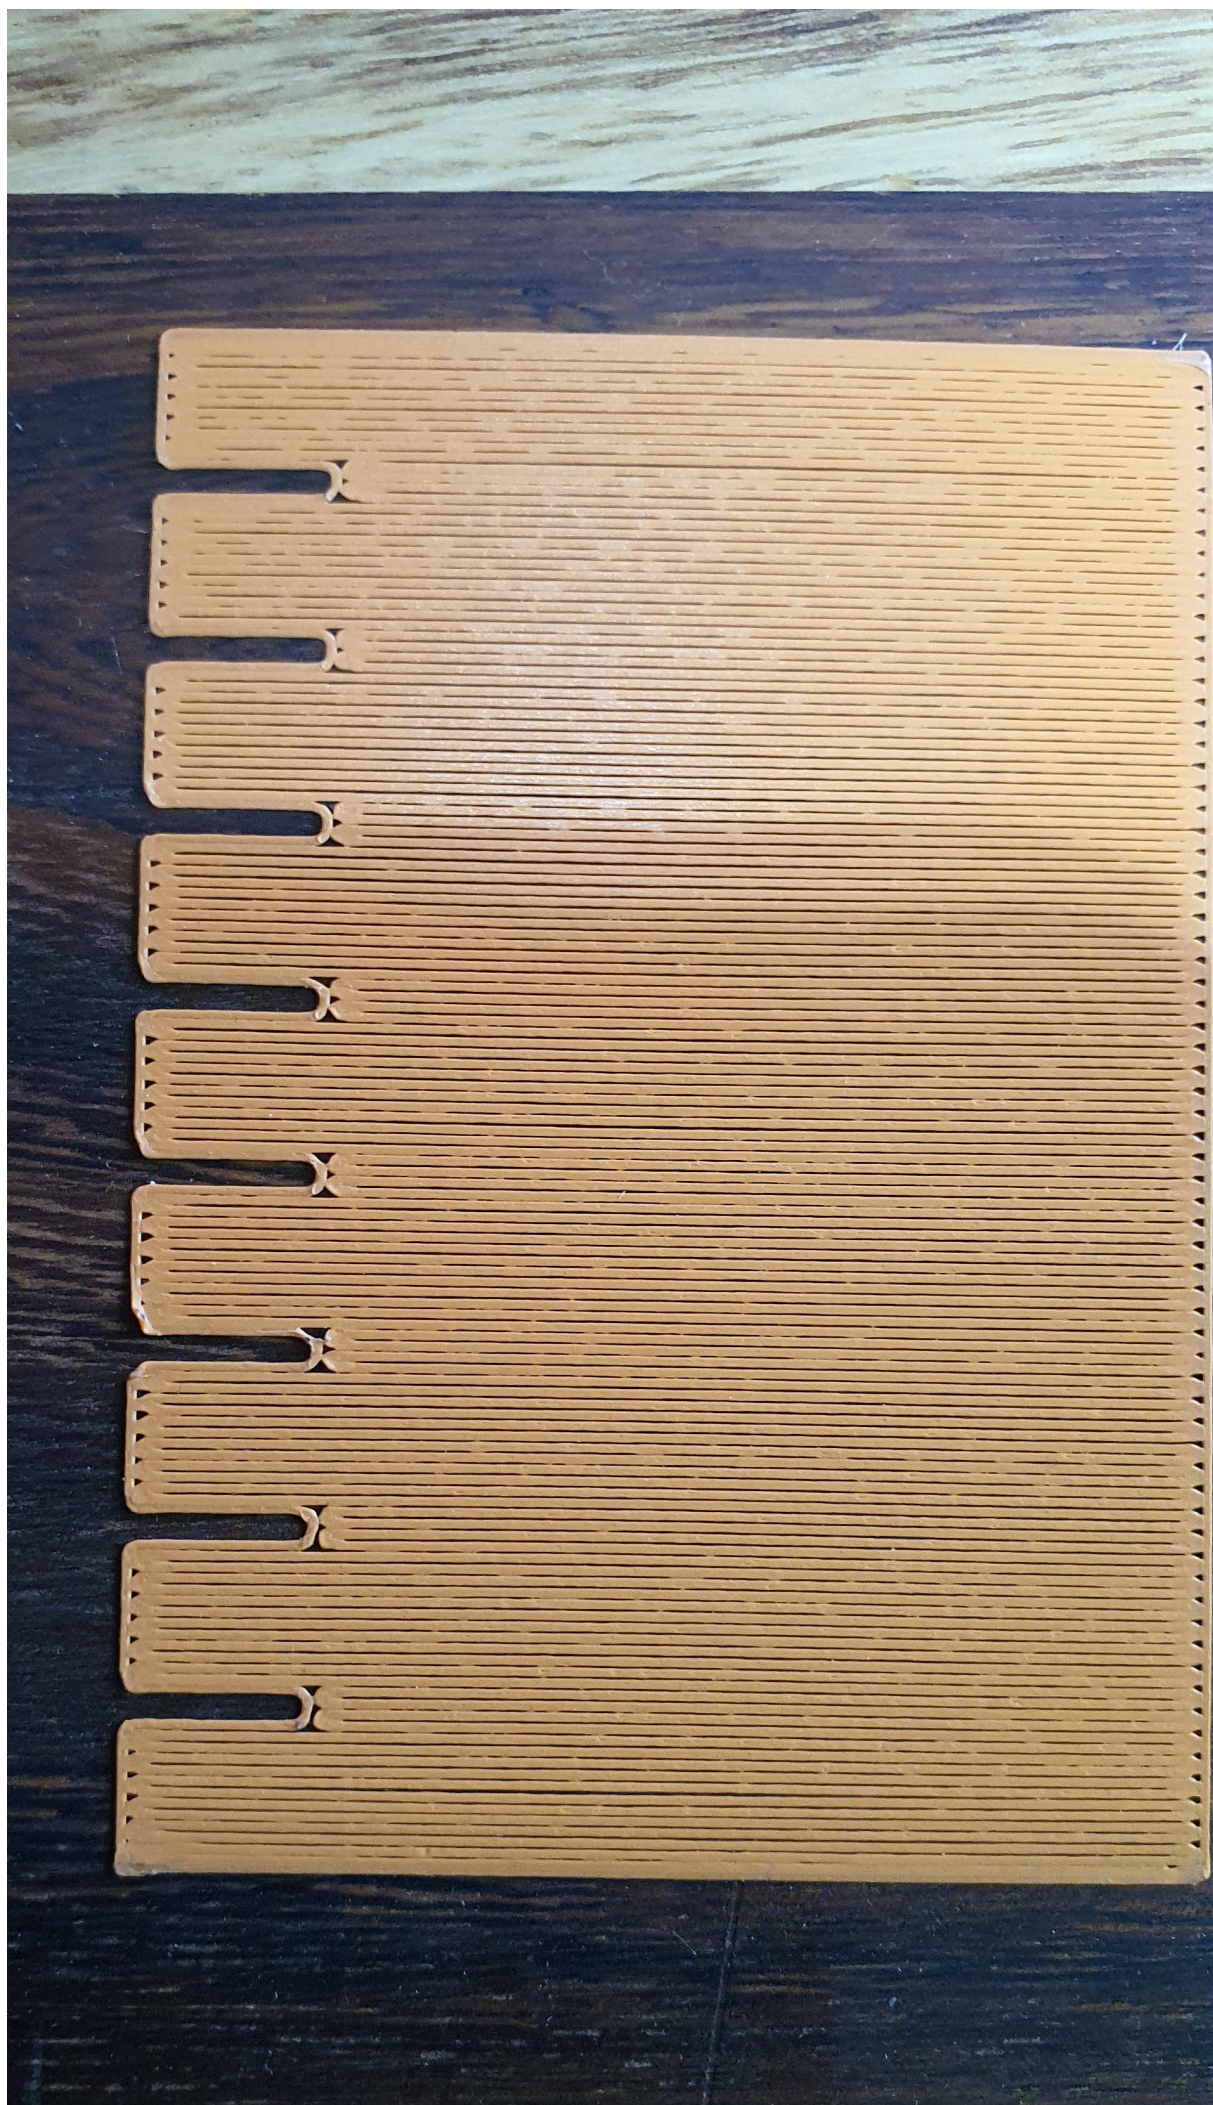

That is not a first layer, that is a bunch of strings.



(Socks)

Now it is your time

This time you will win, you will achieve the perfect first layer. Look at this picture this is what you will see on your printer when you start printing the model. Read the text after that picture and then start printing the model and adjust your z level to get the perfect first layer.



You see this marks on the left side, i count from bottom to top.

You see how ugly the first 3 look and you see how it starts to get better with the 4.

How did that come from?

It is done with the live Z tuning of your printer, while you print the model and watch carefully how your print looks, you turn the value up or down **in little steps of 50**. Bring the nozzle down by 50 micron watch a minute or how long you need and then decide if more up or more down.

In most cases you start with a nozzle much much much too height over the bed, like on my pictures.

Above section 5 you see how your first layer should look like.

Printing the whole thing takes 9 Minutes, in this print, after 4 Minutes the optimal level was reached.

As often

It is like riding a bike, after you get it for the first time, you know it and from there you can do it just by the way and any time without trouble.

If you get it, it is so easy that you now understand why the experts don't care and fail to give this knowledge to the new users. If you know it, it is incredibly easy.

If this howto was helpful for you, click on like and follow me. To get a free Spool of Prusament use one of this Promo Links for your Printer Order.

Prusa Core One+ Kit Prusa Core One Prusa Core One L Prusa XL

The next step to increase print quality

Next step is to find the optimal print temperature. I made a very fast less filament needing temp tower series with pre configured 3mf files for prusaslicer and bambustudio. 38 models, 19 different kinds of filament and 19 different temperature ranges in steps of 10°C and 5°C.

Filament Temperature Tester

What to print next?

You now have a well calibrated first layer and could for example print one of this fidget spinning rings. They are printed in place, no assembly no

glue no screws. This rings are gerat giveaways for visitors and your printer is now able to print cool stuff like that.

<https://www.printables.com/model/272994-one-ring-not-to-rule-but-to-roll>



Going deeper?

The final level of first layer calibration goes straight into the mesh leveling. If you like to see how your printer print at any position of his bed, try this.

<https://www.printables.com/model/303825-full-print-bed-many-printers>

Please publish your makes

Publish your first layer print [here](#) as a make to help other users to see how it looks when the Z layer goes from bad to calibrated. **The more different views we get the less stress.**

Donation

[If you like to donate you can buy me a coffee](#)

DESASTER

Desaster is the german word for disaster. I choose to use german because in german every problem sounds more dramatic and nothing is more dramatic then a 3D printer without a proper first layer calibration.

.
.
.


Stop reading here.

.
.
.


(*)

It takes me more time to do my very first first layer calibration than to build the mk3.


Model files




prusaslicer-righthand.3mf




prusaslicer-lefthand.3mf




cura-righthand.3mf




cura-lefthand.3mf




firstlayercalibration-firstlayer.stl




ps-core1_asa.3mf




ps-core1_petg.3mf




ps-core1_pla.3mf



ps-elegoo-neptun3.3mf



ps_prusament_petg_ultraglow.3mf



elegoo_centauri_carbon2_canvas_pla-firstlayer.3mf

Print files



prusa-mk3-04-nozzle-petg.gcode

⚙️ PET 📏 0.40 mm 📐 0.20 mm ⌚ 0.19 hrs ⚖️ 1 g 🖨️ Prusa MK3/S/S+



prusa-mini-pla.gcode

⚙️ PLA 📏 0.40 mm 📐 0.20 mm ⌚ 0.11 hrs ⚖️ 1 g 🖨️ Prusa MINI / MINI+



prusa-mk3-06-nozzle-pla.gcode

⚙️ PLA 📏 0.60 mm 📐 0.20 mm ⌚ 0.10 hrs ⚖️ 1 g 🖨️ Prusa MK3/S/S+



prusa-mk3-06-nozzle-petg.gcode

⚙️ PET 📏 0.60 mm 📐 0.20 mm ⌚ 0.10 hrs ⚖️ 1 g 🖨️ Prusa MK3/S/S+



prusa-mk3-04-nozzle-pla.gcode

⚙️ PLA 📏 0.40 mm 📐 0.20 mm ⌚ 0.19 hrs ⚖️ 1 g 🖨️ Prusa MK3/S/S+



prusa-mini-petg.gcode

⚙️ PET 📏 0.40 mm 📐 0.20 mm ⌚ 0.11 hrs ⚖️ 1 g 🖨️ Prusa MINI / MINI+

License ©

This work is licensed under a
GNU

General Public License v3.0

GNU
General
Public
License
v3.0

- ✖ | Sharing without ATTRIBUTION
- ✔ | Remix Culture allowed

- ✓ | Commercial Use
- ✓ | Meets Open Definition
- i | Share under the same license