

How to set up PrusaSlicer

This will setup PrusaSlicer for the **Klipper Printer Additions**, and if you like for **Object Exclusion**, too. I made this guide with PrusaSlicer 2.6/2.7.

Start G-code

- Click **Printer Settings** --> **Custom G-code** section.

PrusaSlicer V2.5 and higher

- The following text block contains **minimized text lines**, so it has no line breaks on copy & paste, which would later lead to error messages.
- **Select** the following **ENTIRE** text block. **Do not copy line-per-line!** Copy & Paste the **entire** text block into the **Machine Start G-code**:

; This is a text block with minimized lines.

;;; KPA Start


M109 S0

M190 S0

;;_Pre_Print_Procedure
BED_TEMP={first_layer_bed_temperature[initial_extruder]}
EXTRUDER_TEMP={first_layer_temperature[initial_extruder]}
AREA_START={first_layer_print_min[0]}, {first_layer_print_min[1]}
AREA_END={first_layer_print_max[0]}, {first_layer_print_max[1]}
LAYER_C={total_layer_count} LAYER_H={layer_height}
FILA_TYPE={filament_type} NOZ_DIA={nozzle_diameter[0]}
M140 S{first_layer_bed_temperature[initial_extruder]} ; Let a Power failure Resume feature pickup the temperature.
M104 S{first_layer_temperature[initial_extruder]} ; Let a Power failure Resume feature pickup the temperature.

;;; KPA End

- You don't need anything else in your **Start G-code**. If you have g-code commands in there, comment them out, or delete them.

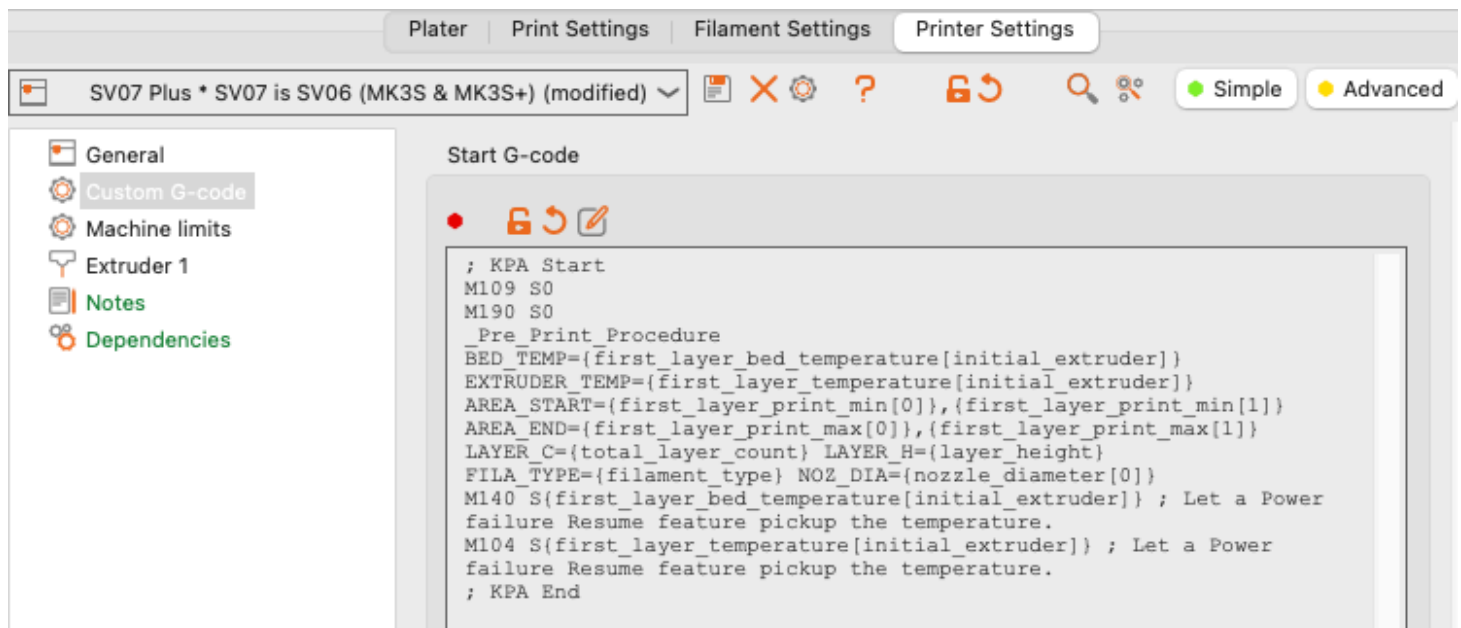

- You don't need anything else in your start-g-code. If you have g-code commands in there, comment them out, or delete them.

PrusaSlicer before version 2.5 (untested)

- The following text block contains **minimized text lines**, so it has no line breaks on copy & paste, which would later lead to error messages.
- **Select** the following **ENTIRE** text block. **Do not copy line-per-line!** Copy & Paste the **entire** text block into the **Machine start G-code**:

; KPA Start

M109 S0

M190 S0

;Pre_Print_Procedure BED_TEMP={first_layer_bed_temperature} EXTRUDER_TEMP={first_layer_temperature[initial_extruder] + extruder_temperature_offset[initial_extruder]} AREA_START={first_layer_print_min[0]},first_layer_print_max[0]} AREA_END={first_layer_print_max[0]},first_layer_print_max[0]} LAYER_C={total_layer_count} LAYER_H={layer_height} FILA_TYPE={filament_type[0]} NOZ_DIA={nozzle_diameter[0]}

M140 S{first_layer_bed_temperature} ; Let a Power failure Resume feature pickup the temperature.

M104 S{first_layer_temperature[initial_extruder] + extruder_temperature_offset[initial_extruder]} ; Let a Power failure Resume feature pickup the temperature.

; KPA End

End G-code

- For the **End G-code** section, copy & paste this text block:


; KPA Start

_End_Print

; KPA End


- This is a macro of the Printer Additions which cleans up state, lifts up the extruder a bit higher, retracts a bit more, and turns off the heaters, motors, fans.

- You don't need anything else in your **Machine end G-Code**. If you have g-code commands in there, comment them out, or delete them.

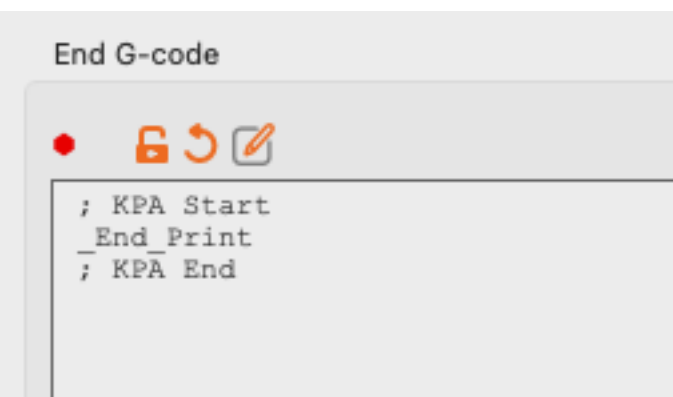


Slicer Modes

- In the **Print Settings**, under the **General**-section, set the **g-code flavor** to "Klipper":

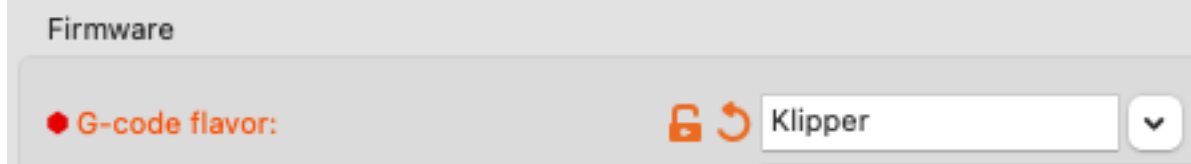


- Also in the **General**-section, turn ON "Use relative E distances". Otherwise your extruder will spin like crazy.

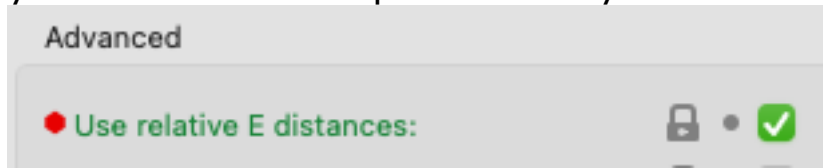

Object Exclusion

Open **Print Settings**, --> "**Output options**" and set "**Label objects**" to "**Firmware-specific**". In older releases of PrusaSlicer there's just a checkbox to tick.

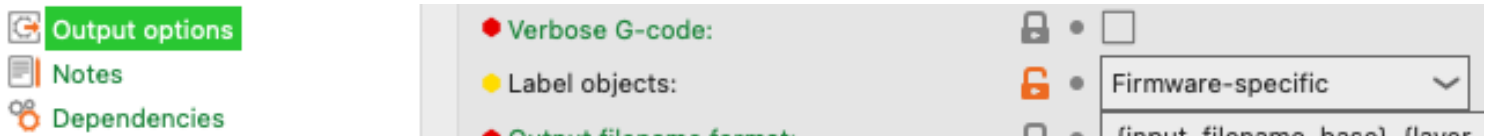

Support

If my work supports you, please support me too:

- PayPal: <https://www.paypal.com/paypalme/Morgennebel/>

When you buy something, please use my Referral-Link, at no additional cost:

- AliExpress: https://s.click.aliexpress.com/e/_De0Vu1h
- Amazon: <https://amzn.to/3L35OX2>

Thank you!

Christian 😊