




## Bambu Lab AMS Universal Spool Center Desiccant Holder

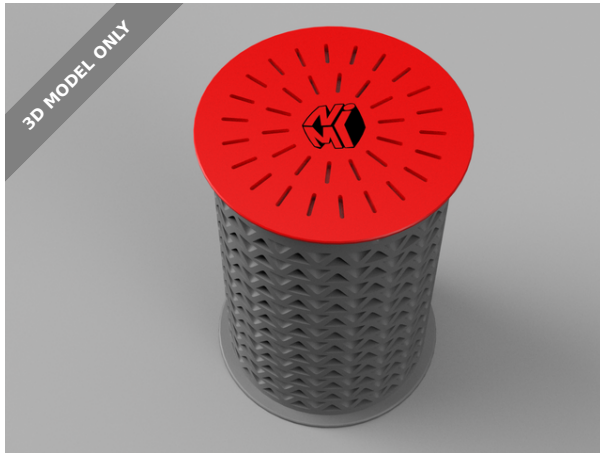

NeedItMakIt

[VIEW IN BROWSER](#)

updated 2. 10. 2023 | published 2. 10. 2023

### Summary

If you have an AMS, you probably want to get more desiccant into it. This is one way to do it.

---

[3D Printers](#) > [Bambu Lab Parts & Upgrades](#)

---

Tags: [desiccant](#) [desiccant holder](#)

---


To print this, use Vase Mode (Spiral)

Change line widths from 0.4 to 0.7, increase by 0.3mm to each width setting

Use 6 bottoms, this makes sure that the vase has a good connection to the top or bottom.

Use ASA/ABS or PETG if you want something that is more flexible. PLA may work as well, but I've not tried it.


# Model files



**body.stl**



**lid.stl**



**vent\_desi\_hldr-v4.f3d**

## License

This work is licensed under a  
[Creative Commons \(4.0 International License\)](https://creativecommons.org/licenses/by/4.0/)



### Attribution

- ✗ | Sharing without ATTRIBUTION
- ✓ | Remix Culture allowed
- ✓ | Commercial Use
- ✓ | Free Cultural Works
- ✓ | Meets Open Definition